ORCSOUND

FULL DESCRIPTION

TILDE PRO

BUTTONS AND LEDS LIGHTS

1 . Command buttons

system & bluetooth®

Start	tight press 0,2s
Shutdown	tight press 0,2s
Switch language - *(English-French)*	long press
Battery level - *(sound notification % of battery)*	2x short press
Turn device in pairing mode	long press
Reset bluetooth®	tight press 0,2s

surrounding management

Activate/deactivate ANC mode - *«Active noise cancelling mode»* — push ↕ short press

Noise Reduction

Maximum noise-reduction - *Put ANC to maximum level* — press down and maintain ↓

Adjusted noise reduction - *Increases ANC level step by step* — press down ↓ and fast release

Aware

Maximum awareness - *Put ANC to minimum level* — lift and maintain ↑

Adjusted awareness - *Decreases ANC level step by step* — lift ↑ and fast release

Aware +

Enter/Exit "Face-to-face conversation" - *Only if no active call ongoing* — short press

telephony

Single Call

Answer call - *When call is incoming* — short press

Reject call - *When call is incoming* — long press

Hang up - *When call is active* — long press

Twin call

Reject twin call - *When call is active & twin call is incoming* — long press

Accept twin call & end active call - *When call is active & twin call is incoming* — long press

Accept twin call & hold active call - *When call is active & twin call is incoming* — short press

Swap call - *When several calls are active* — long press

Hang up current call - *When several calls are active* — long press

Mute/Hold

Mute / unmute without the boom-microphone - *When call is active* — short press

Mute / unmute with the boom-microphone - *When call is active* — short press

Call on hold - *When call is active* — short press

media management

Music

Play/pause music	short press
Next track	long press
Previous track	long press

Volume

Volume increases by 1 step	short press
Volume decreases by 1 step	short press

Vocal command

Activate Apple Siri or Google Assistant	long press

manual update mode

Boot in update mode	↕ push + power-on
Reboot device after update mode	short press

2. LED light notifications

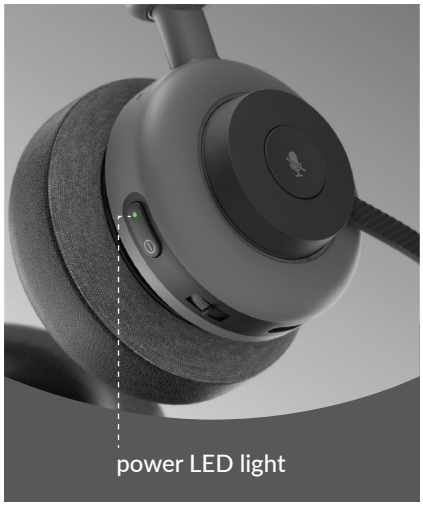

power led light

blinking	SYSTEM : Device is booting
steady	BATTERY : Strong battery - *Device ON*
slow blinking	BATTERY : Charging complete - *Device OFF & USB-C plugged*
steady	BATTERY : Moderate battery < 35% - *Device ON*
slow blinking	BATTERY : Charging ongoing - *Device OFF & USB-C plugged*
steady	⚠ BATTERY : Low battery < 10%, needs charging - *Device ON*
blinking	SYSTEM : Device shutdown
blinking (3 ≃ minutes)	BLUETOOTH® : Device shutdown
steady (≃3 seconds)	BLUETOOTH® : Pairing success
steady	UPDATE MODE : Update mode active - *Waiting for action from the user*
blinking	UPDATE MODE : Update is being processed - *Shall not be interrupted*
steady (1 second)	SYSTEM : USB - C plugged - *Event*

earpads led lights

steady on both earpads	AWARE+ : Conversation light - *Face-to-face conversation ongoing*
steady on both earpads	TELEPHONY : Busy light - *Call ongoing or ready for a call*
blinking on both earpads	TELEPHONY : Incoming call
R ≃ 4 secs & device turns off	⚠ SAFETY INTERLOCK : Right cussion not recognized - *Refer to troubleshooting*
L ≃ 4 secs & device turns off	⚠ SAFETY INTERLOCK : Left cussion not recognized - *Refer to troubleshooting*

boom-microphone led light

steady	TELEPHONY : Busy light - *Call ongoing or ready for a call*